


CONFIGURATION GUIDE

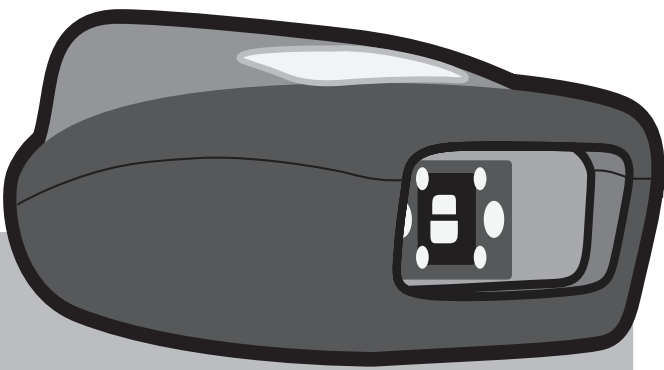

CR1000

Configuration barcodes generated based on current firmware versions
WEB GENERATED
10-1-2018



www.codecorp.com



User Manual



[YouTube.com/codecorporation](https://www.youtube.com/codecorporation)










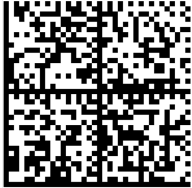



code
ADVANCED BARCODE READERS

Table of Contents

General Reading Mode Settings.....	3
Continuous Scan On.....	3 (A2)
Continuous Scan Off - Default.....	3 (A3)
Motion Detection On In and Out of Stand.....	3 (A4)
Optimize Motion Detection for Bright Environments - Default.....	3 (B1)
No Motion Detection Delay - Default.....	3 (B2)
500ms Motion Detection Delay.....	3 (B3)
Motion Detection Off In and Out of Stand.....	3 (B4)
Anti-Glare On.....	3 (C1)
Cell Phone Reading Enhancement On.....	3 (C2)
Data Formatting (Prefix/Suffix) Settings.....	3
Suffix Enter (USB Keyboard Mode Only).....	3 (C4)
USB Settings.....	3
Reset to USB Factory Defaults.....	3 (D2)
USB Keyboard Mode.....	3 (D3)
Reader Feedback Settings.....	3-4
Beep Volume 100% - Default.....	3 (E2)
Beep Volume 67%.....	3 (E3)
Beep Volume 33%.....	3 (E4)
Beep Volume 0%.....	4 (A1)
Reset, Clear and Save Reader Settings.....	4
Reboot Reader.....	4 (A3)

CR1000 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

General Reading Mode Settings	Continuous Scan On  M10012_02 A2	Continuous Scan Off - Default  M10011_01 A3	Motion Detection On In and Out of Stand  M10404_02 A4
	Optimize Motion Detection for Bright Environments - Default  M10014_03 B1	No Motion Detection Delay - Default  M10016_03 B2	500ms Motion Detection Delay  M10017_03 B3
Anti-Glare On  M10352_01 C1	Cell Phone Reading Enhancement On  M10163_01 C2	Data Formatting (Prefix/Suffix) Settings	Suffix Enter (USB Keyboard Mode Only)  M10134_01 C4
USB Settings	Reset to USB Factory Defaults  M10002_02 D2		USB Keyboard Mode  M10200_01 D3
	Reader Feedback Settings	Beep Volume 100% - Default  M10197_01 E2	Beep Volume 67%  M10196_01 E3

CR1000 Configuration Guide

NOTE: Configuration changes will take effect immediately and be saved to memory

<p>Beep Volume 0%</p>  <p>M10194_01</p> <p style="text-align: right;">A1</p>	<p style="text-align: center;">Reset, Clear and Save Reader Settings</p>	<p>Reboot Reader</p>  <p>M10296_01</p> <p style="text-align: right;">A3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">A4</p>
<p>Intentionally Blank</p> <p style="text-align: right;">B1</p>		<p>Intentionally Blank</p> <p style="text-align: right;">B2</p>	<p>Intentionally Blank</p> <p style="text-align: right;">B3</p>
<p>Intentionally Blank</p> <p style="text-align: right;">C1</p>	<p>Intentionally Blank</p> <p style="text-align: right;">C2</p>	<p>Intentionally Blank</p> <p style="text-align: right;">C3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">C4</p>
<p>Intentionally Blank</p> <p style="text-align: right;">D1</p>	<p>Intentionally Blank</p> <p style="text-align: right;">D2</p>	<p>Intentionally Blank</p> <p style="text-align: right;">D3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">D4</p>
<p>Intentionally Blank</p> <p style="text-align: right;">E1</p>	<p>Intentionally Blank</p> <p style="text-align: right;">E2</p>	<p>Intentionally Blank</p> <p style="text-align: right;">E3</p>	<p>Intentionally Blank</p> <p style="text-align: right;">E4</p>